FIG.1

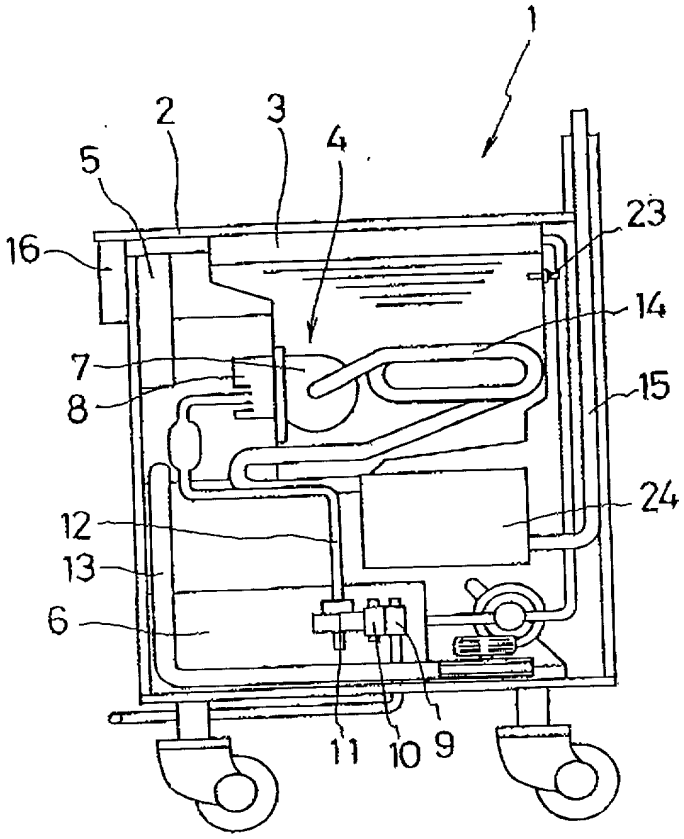

FIG.2

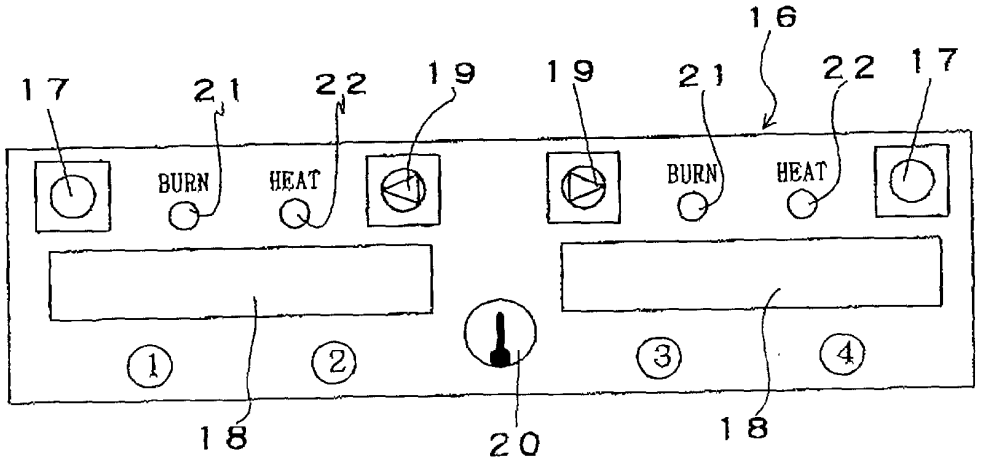

FIG.3

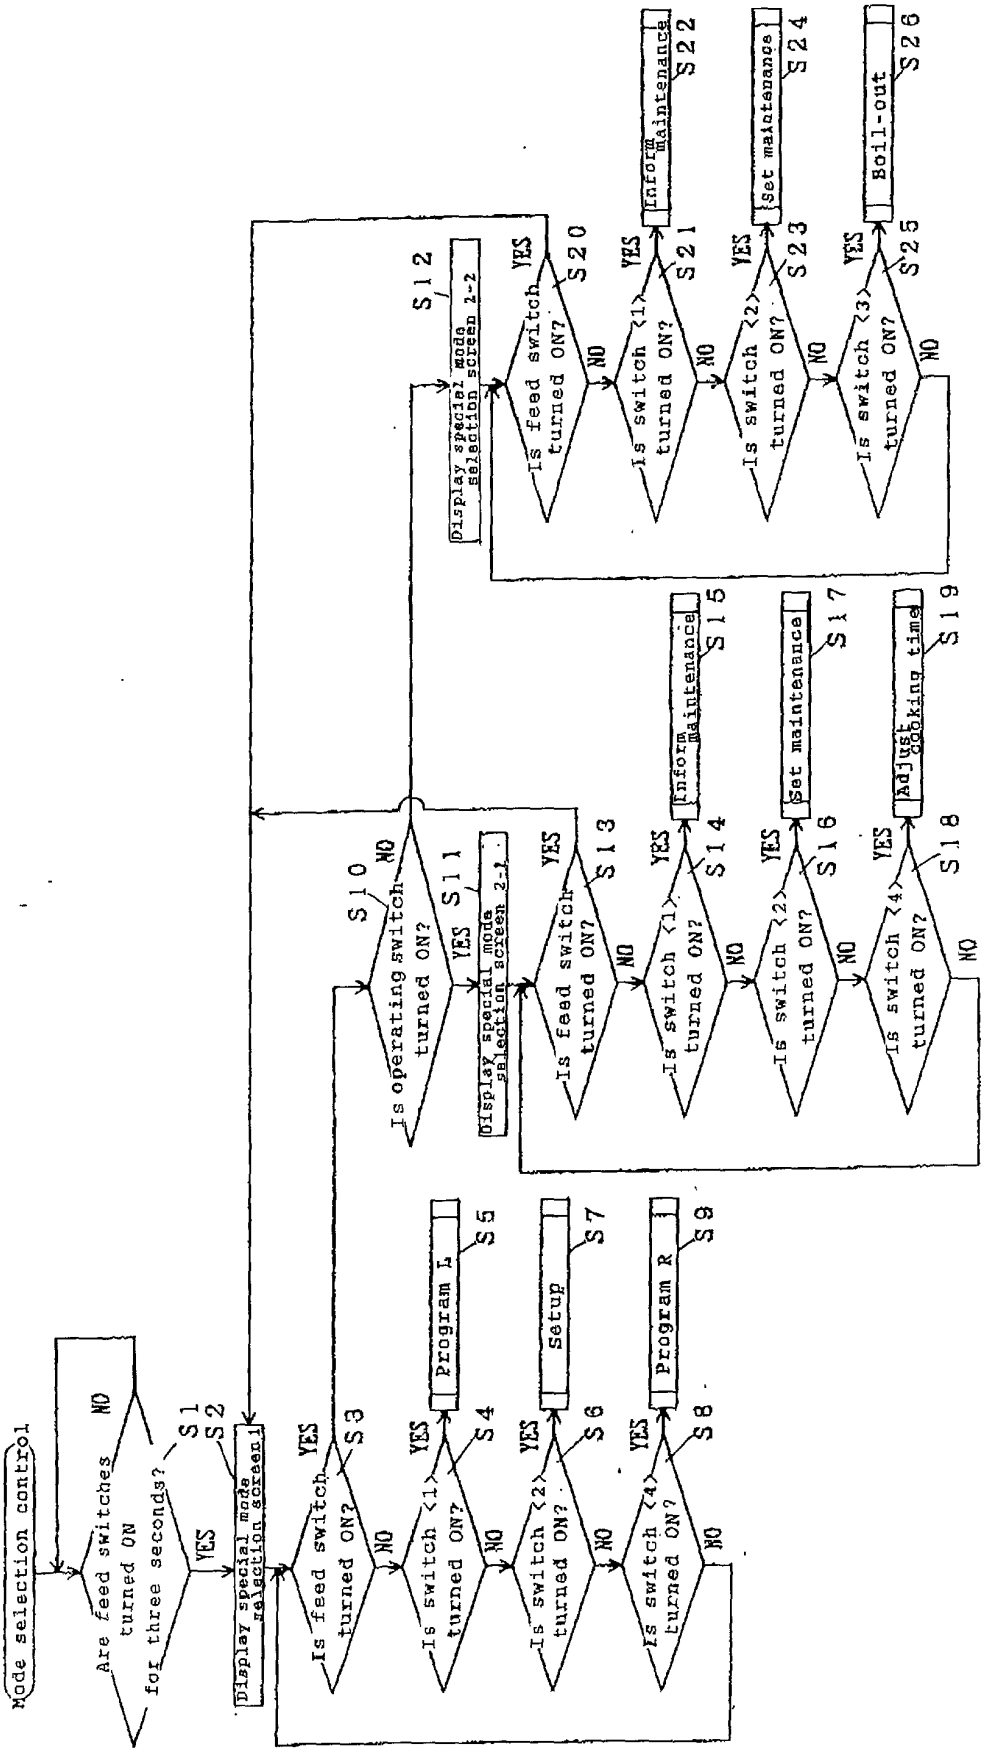
Mode selection control
Are feed switches turned ON for three seconds?
NO
YES
S1
S2
Display special mode selection screen 1
Is feed switch turned ON?
YES
NO
S3
Is switch <1> turned ON?
YES
NO
S4
Program L
S5
Is switch <2> turned ON?
YES
NO
S6
Setup
S7
Is switch <4> turned ON?
YES
NO
S8
Program R
S9
Is operating switch turned ON?
NO
YES
S10
S11
Display special mode selection screen 2-1
Is feed switch turned ON?
YES
NO
S13
Is switch <1> turned ON?
YES
NO
S14
Inform maintenance
S15
Is switch <2> turned ON?
YES
NO
S16
Set maintenance
S17
Is switch <4> turned ON?
YES
NO
S18
Adjust cooking time
S19
S12
Display special mode selection screen 2-2
Is feed switch turned ON?
YES
NO
S20
Is switch <1> turned ON?
YES
NO
S21
Inform maintenance
S22
Is switch <2> turned ON?
YES
NO
S23
Set maintenance
S24
Is switch <3> turned ON?
YES
NO
S25
Boil-out
S26

FIG.4

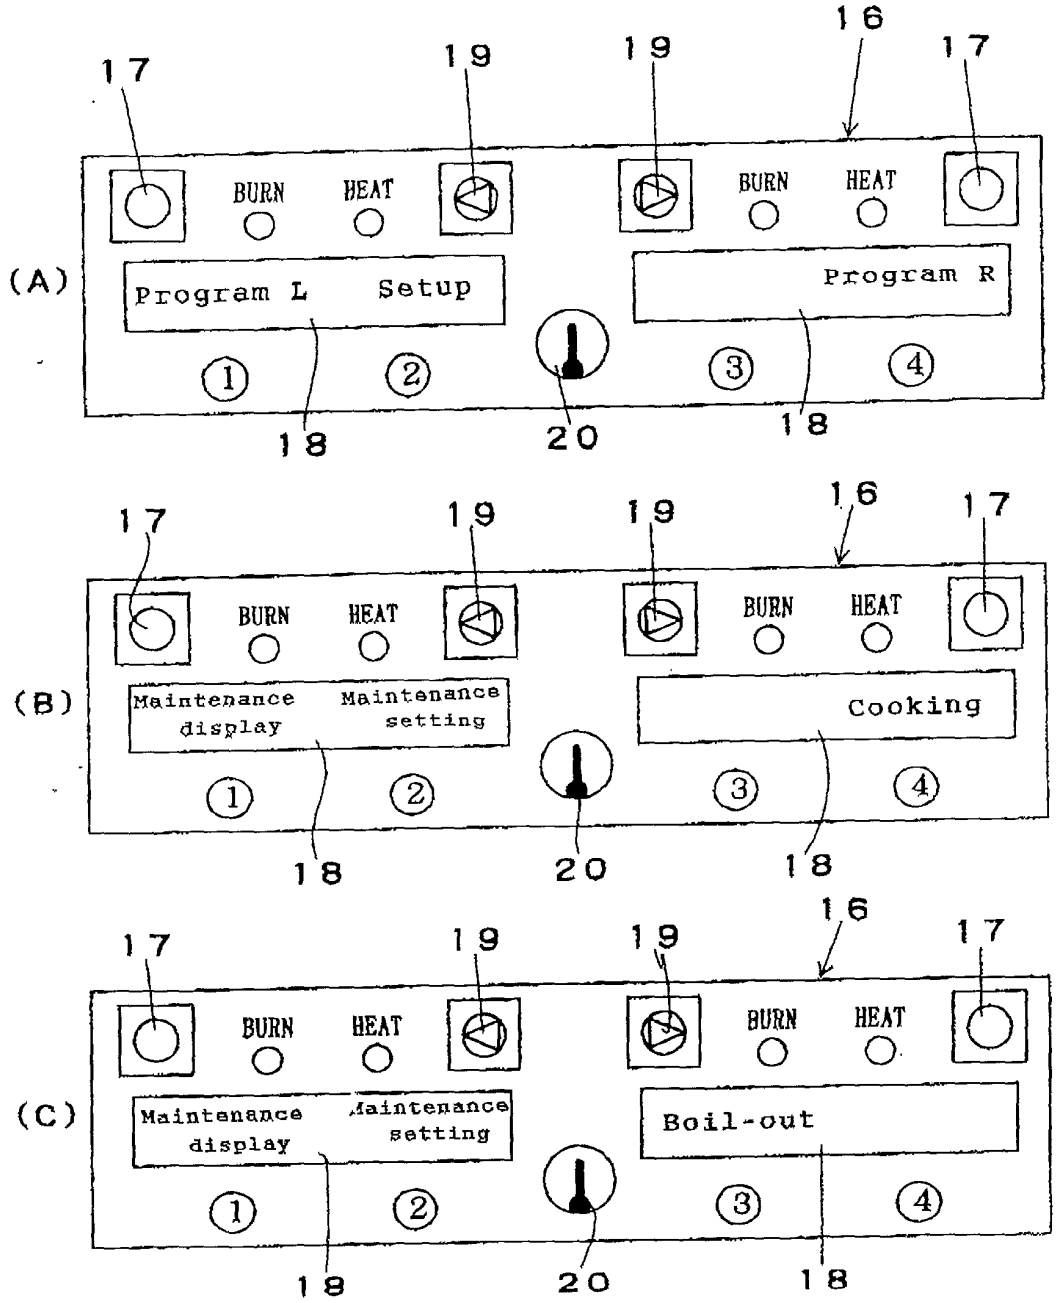
(A)
17
19
19
16
17
BURN
HEAT
BURN
HEAT
Program L
Setup
Program R
①
②
③
④
18
20
18
(B)
17
19
19
16
17
BURN
HEAT
BURN
HEAT
Maintenance display
Maintenance setting
Cooking
①
②
③
④
18
20
18
(C)
17
19
19
16
17
BURN
HEAT
BURN
HEAT
Maintenance display
Maintenance setting
Boil-out
①
②
③
④
18
20
18